



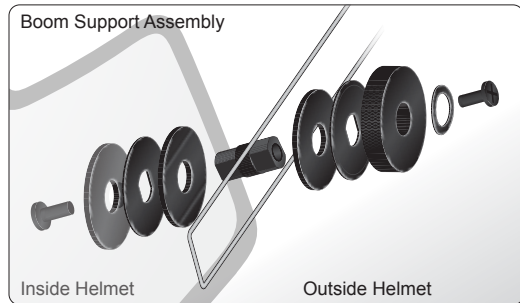

OPEN FACE HELMET KIT

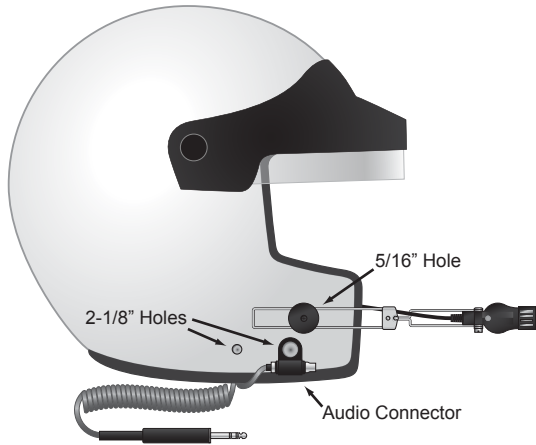

Installation Instructions:

- 1) Remove the helmet's inside padding on the right side.
- 2) Drill a 5/16" hole in the right side of the helmet positioned so that mic will touch the driver's lips when the boom is installed.
- 3) Remove the bottom screw and first plastic washer from the Boom Support.
- 4) Insert the screw and plastic washer from the inside and attach to the boom support on the outside of the helmet. Do not fully tighten yet.
- 5) Remove the screw, knurled knob and washer. Place the boom between two notched washers, align, reassemble and tighten both screws.
- 6) Drill two 1/8" holes in the helmet for the cable clamps.
- 7) Attach the audio connector using the large cable clamp and rivet with a star washer between the helmet and the clamp.
- 8) Tuck the lead wire from audio connector inside the helmet alongside the cable that goes to the harness. Use a cable clamp to attach both of these cables to the helmet with a rivet.
- 9) Secure the loose cables by adding a zip tie above their clamp. This will keep them from slipping when the cable is pulled from the outside.

For further help or additional information call:

1-800-272-7111